



TomTom XXL 540 back panel Replacement

This guide walks you through replacing TomTom XXL 540 back panel

Written By: Mike Sollars





TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — back panel




- Peel back the sticker on the bottom of the device to reveal the two screws

Step 2



- Unscrew the two t-5 screws

Step 3

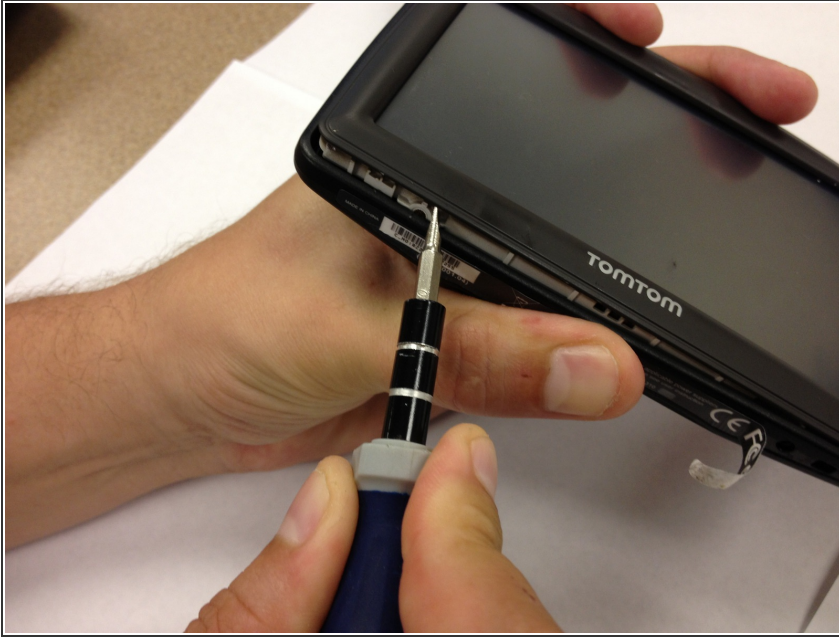


- Shove the flat head screw driver into the edge of the device. Pry the faceplate

Step 4




- Release the ribbon cable

Step 5

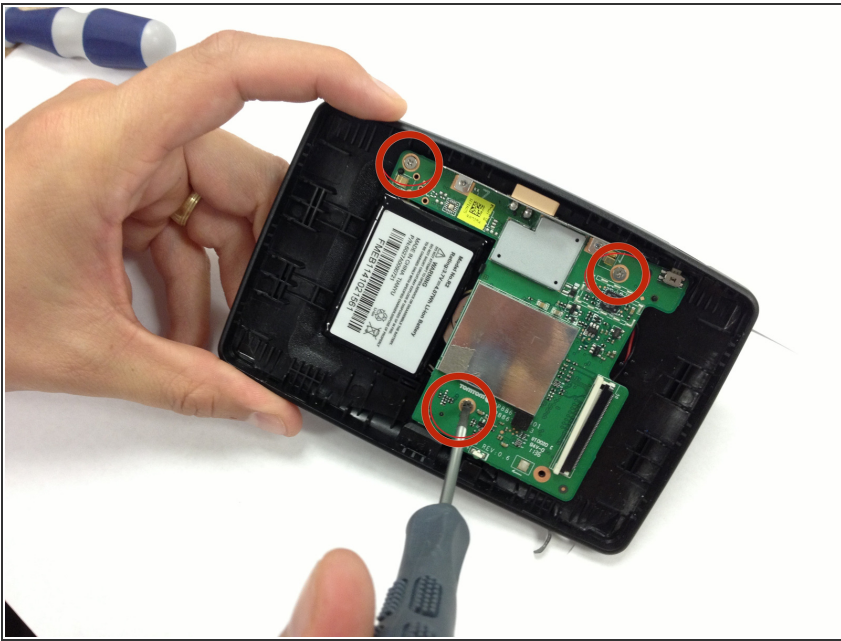


- Identify the green motherboard.
- Unscrew the three screws holding the board in place.

Step 6

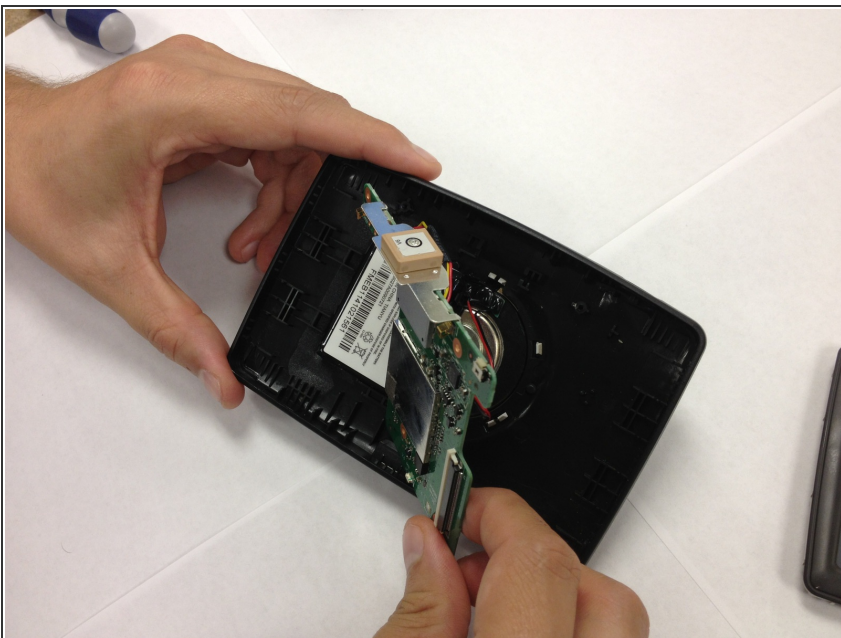

- Remove the board and battery from the back plate

Step 7

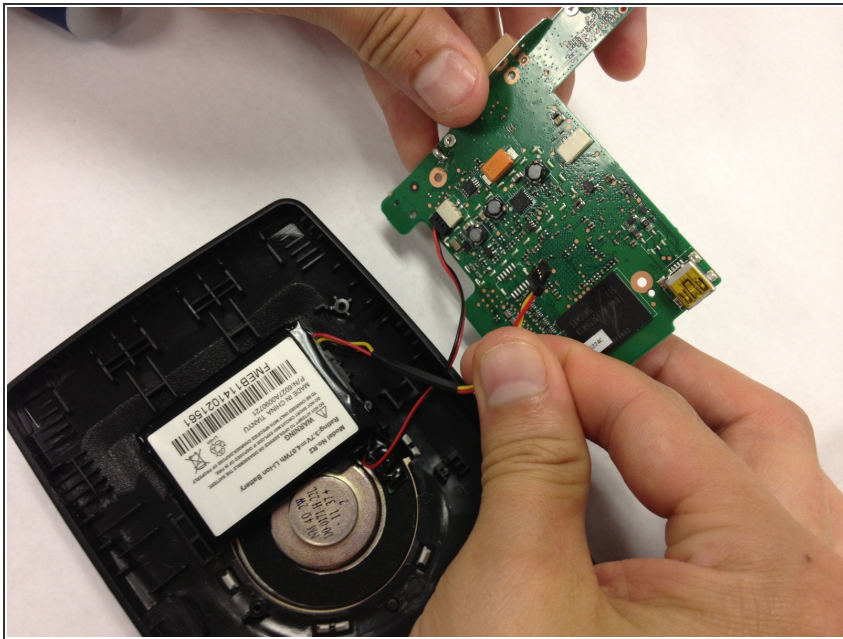

- Attach the board and battery to the new back plate

Step 8



- Put the green motherboard back into the back plate and secure with the 3 screws

Step 9



- Snap that mutha back together!

Step 10



- insert t-5 screws and tighten

Step 11



- Replace the label to hide screws

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-06 11:51:09 AM.